


# Installation

## Shower Guide gutter capacity 30 ltr p / min



The shower can be poured into a new or existing shower be installed.


The floor must be sufficient space for the siphon and the drainage area so that it can be properly connected.

It should not stress the link otherwise you are likely to leak.


Make love for very precise placement of the space available.

Please note the included collar over this.


## D i a g r a m

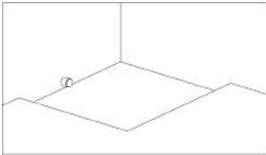


1. Start installing

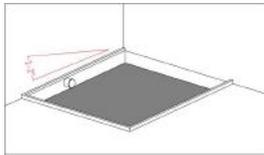

2. Laying the ground to tilt 1-2°

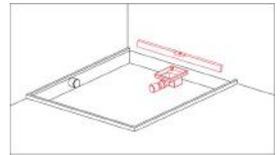


3. Place the floor drain in place, and use the horizontal ruler to ensure the horizontal surface around it

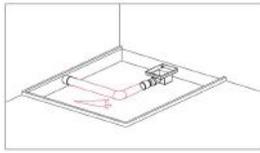


4. Install the water pipes




5. Fill and keep the ground 1-2°

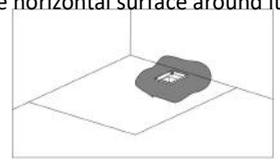


6. The first waterproof coating

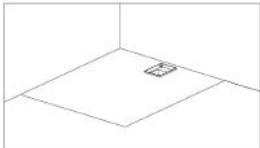


7. Install waterproof cloth

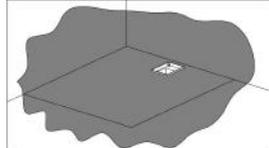


8. The second large-area waterproof coating

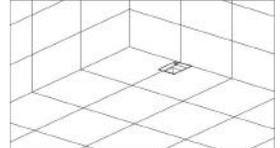


9. Lay tiles

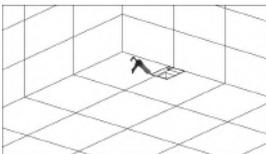

10. Filled silicone between floor drain and ceramic

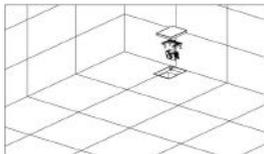

11. Install the odor protection box and cover the filter net

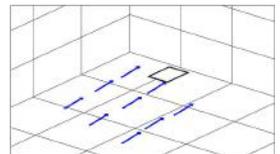

12. Complete the installation